

**POCKET-SIZED
DIGITAL MULTIMETER
OPERATOR'S
INSTRUCTION MANUAL**

Y01-04-0178 A0

display	
Polarity indication	" - " displayed for negative polarity
Operating temperature	0°C to 40°C (32°F to 104°F)
Storage temperature	-10°C to 50°C (10°F to 122°F)
Low battery indication	 appears on the display
Size	120x70x18mm
Weight	approx. 110g

OPERATING INSTRUCTION

DC voltage measurement

1. Set the function switch at $\bar{V}$ position.
2. Set the range switch at desired position. If the magnitude of voltage to be measured is unknown beforehand, set the range switch at the highest position and then reduce until satisfactory reading is obtained.
3. Connect test leads across the source or load being measured. The polarity of red lead connection will be indicated at the same time as the voltage value.
4. When the range switch is set at 500V position. "HV" sign will appear on the display to remind user of high voltage measurement. Special attention should be paid.

AC voltage measurement

1. Set the function switch at $\bar{V}$ position.